truVue™

HD-SDI PTZ SPEED DOME CAMERA

User Manual

• Please read this instruction carefully for correct use of the product and preserve it for future reference purposes

Disclaimer:

► This manual is provided for user reference only, without legal restraint.

► The content of this manual is subject to change without prior notice, and the updates will be added into the new version of this manual.

► This manual may contain several technically incorrect places or printing errors, please feel free to let us know. We will readily improve or update the products or procedures described in the manual.

Notes on Safety

■ Please use the specified power supply to connect(supports AC24V/2A or DC12V/3A).

■ Do not attempt to disassemble the cameramodule ; in order to prevent electric shock, do not remove camera module screws or covers .

■ There are no user-serviceable parts inside. Please contact Security Merchants as soon as possible if there is any failure.

■ Avoid from incorrect operation, shock vibration, heavy pressing which can cause damage to product.

■ Do not use corrosive detergent to clean main body of the camera. If necessary, please use soft dry cloth to wipe dirt; for hard contamination, use neutral detergent. Any cleanser for high grade furniture is applicable.

■ Avoid aiming the camera directly towards extremely bright objects such as sun, as this may damage the image sensor.

■ Please follow the instructions to install the camera. Do not mount the camera upright image will be reversed.

■ Do not operate it in high temperature, humidity and power supply are beyond the limited stipulations.

■ Keep away from heat sources such as radiators, heat registers, stove, etc.

■ Do not expose the product to the direct airflow from an air conditioner. Otherwise, it may cause moisture condensation inside the clear dome due to temperature difference between internal and external of the dome camera.

CONTENTS

1 Introduction

1.1 Overview....1
1.2 Characteristics....1
1.3 Dip Switch Setup....2

2 Installation Guide

2.1 Interfaces and parts....4
2.2 How to Install....5
2.3 Connection....8

3 Basic Operation Guide

3.1 Startup and Shutdown....10
3.2 Keyboard Setup....10

4 Menu Setup

4.1 System Information....11
4.2 System Setup....11
4.2.1 Auto PanTilt Flip....11
4.2.2 Language....11
4.2.3 RS422/485 Setup....11
4.2.4 Time Setup....12
4.2.5 Title Setup....12
4.2.6 North Setup....13
4.2.7 Home Position....13
4.3 Camera Setup....14
4.3.1 Camera Control....14
4.3.2 Image Setup....15
4.3.3 Focus Near Limit....15
4.3.4 Zoom Speed....16
4.3.5 Digital Zoom....16
4.3.6 Video Format....16
4.4 Preset Setup....16
4.5 Dome Function....17
4.5.1 Patrol Setup....17
4.5.2 Task Setup....18
4.5.3 Alarm Setup....19
4.5.4 Trace Setup....20
4.5.5 Day & Night....21
4.5.6 New Password and Change Password....21
4.6 Display Setup....22
4.7 Load Default....23

Appendix A Troubleshooting....24
Appendix B Specification....25

Chapter 1 Introduction

1.1 Overview

This speed dome camera is front-end equipment used for video capture. Its digital flip technology makes omni-directional and non-blind-spot monitoring into reality. Equipped with an IP66-rated housing, embedded auto thermostatic device, 3-level lightning-proof and surge-proof design, the unit is able to adapt to severe environment. Intelligent 3D positioning functions. What's more, OSD menu mode clearly displays the functions of camera, and this speed dome camera is easy to operate.

1.2 Characteristics

► Internal Decoder

- Support RS422 or RS485 protocol
- Support PELCO_D, PELCO_P protocol
- Support address setup via hardware and software

► Internal Camera

- Auto/Manual focus;
- Auto/Manual white balance; auto brightness;
- Auto Day/Night (low illumination);•

► Internal PTZ

- The advanced stepping motor drive enables the dome to rotate smoothly, position precisely, and respond quickly.
- Adopting synchronous belt drive ensures lower noise and stable image during operation.
- Support 360° pan and 90° tilt continuous rotation with non-blind-spot monitoring.
- Pan /tilt preset speed up to 400°/S.
- Pan/Tilt manual speed up to 0.5°~ 120°/S.
- High speed and accurate preset can be called.
- ZAP function is profitable to adjust the speed depending on the change of zoom length which ensures to get clear image at any time.

► Others

- Built-in heater and fan enable to adapt to any severe environment.
- Adopt IP66 waterproof structure which meets international standard.
- Built-in lightning-proof components prevent the dome from damage by lightning strike and surge.

1.3 Dip Switch Setup

Before installing the camera, the dome address, communication protocol and baud rate should be confirmed. The default dome address, protocol and baud rate are 1, PELCO-D and 2400 respectively.If you want to change, please power off the camera firstly and open the camera cover to find the dip switches. The steps are followings:

① SW2 is used to set dome address. The buttons from 1 to 8 are equivalent to bit 0～bit 7 respectively; "ON" status of each button means 1, while "OFF" means 0.

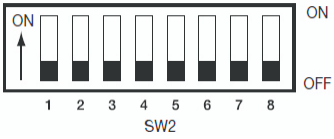

The ID address adopts binary system coding: 2^{n-1} . which "n" stands for the button number in SW2. For example: the button 1 is set to "ON" status , while others are set to "OFF" status, the address is 2^{1-1}=1; the button 2 is set to "ON" status , while others are set to "OFF" status, the address is 2^{2-1}=2, and so on. Please refer to the below chart.

Button	1	2	3	4	5	6	7	8
Dome ID	1	2	4	8	16	32	64	128

● For example: If you want to set dome address as "73", 73=1+8+64 means the button 1, 4, 7 should be set to "ON" status.

● For example: If you want to set dome address as "5", 5=1+4 means the button 1, 3 should be set to "ON" status.

NOTE: Please set the Dip switch correctly according to the binary system, we do not list one by one, only above examples.

② The button 6, 7 and 8 in SW1 are used to set communication protocol. When the three buttons are set to "0" , it is PELCO-D; When any one of them is set to "1", it is PELCO-P.

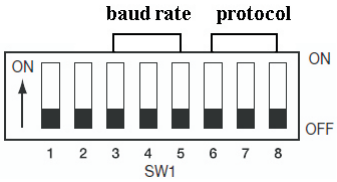

③ The button 3, 4 and 5 in SW1 are used to set baud rate

SW1			Baud Rate
3	4	5	
0	0	0	1200
1	0	0	2400
0	1	0	4800
1	1	0	9600
0	0	1	9600
1	0	1	9600
0	1	1	9600
1	1	1	9600

④ The camera may malfunction if the switches are not fully turned on/off. Please double check the switches before finishing setup.

NOTE: Change is effective after rebooting the camera
You can change the protocol via software menu.
Please refer to chapter 4.2.3 for details.

2.1 Interfaces and Parts

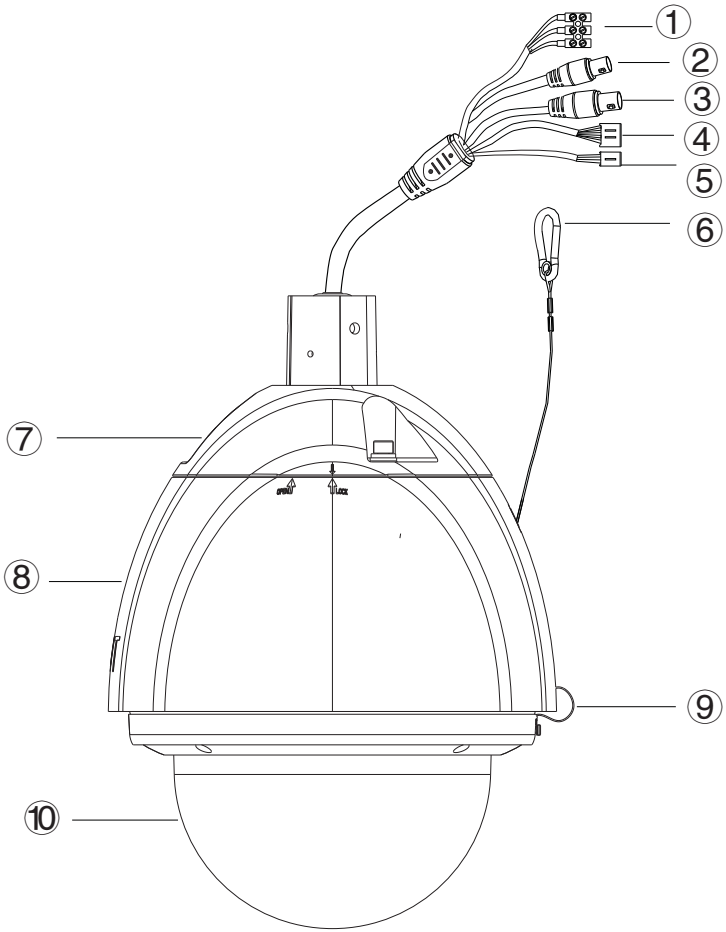

① Power supply connection ② CVBS (PAL) Video Out ③ HD-SDI Video Out
④ Alarm in/out ⑤ RS422/RS485 ⑥ Steel Wire (safety)
⑦ Base Tray ⑧ Outer Cover ⑨ Buckle Wire (safety)
⑩ Transparent cover

2.2 How to install

WARNING

- Please make sure the wall is able to bear the dome camera's weight!
- Please make sure the dome camera is powered off during installation!
- Please install the dome camera according to the below steps!

Step 1

① Carefully take out the dome camera and its attachments from the carton;
② Loosen the fixing screws; separate the body from the base tray. (Fig 1)
③ Loosen three screws and separate the tube from the base tray.

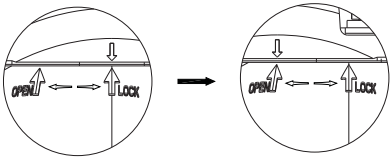

(Fig 1)

Step 2

Pendant mount bracket example shown.

① Fix the frame on the ceiling by using bracket, nuts or other similar parts.

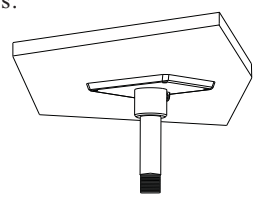

(Fig 3)

② Fasten the tube (coupler) to the frame.

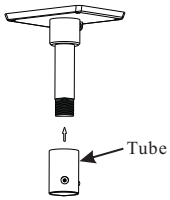

(Fig 4)

③ Pull the cables through the frame.
④ Fix the base tray to the tube with fixing screws; fill the gap between the frame and tube with water-proof materials (recommend teflon tape, not supplied).

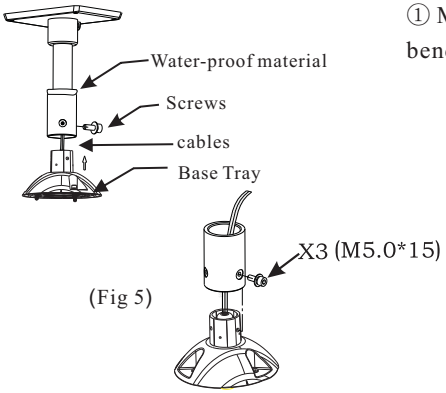

(Fig 5)

Step 3

Set the communication protocol of dome. (please refer to section 1.3 for steps)

Step 4

① Make the arrow of "START" point to the bending part of the spring leaf.

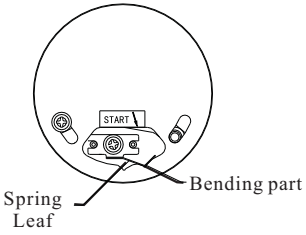

(Fig 6)

② Hook the steel wire on the frame.

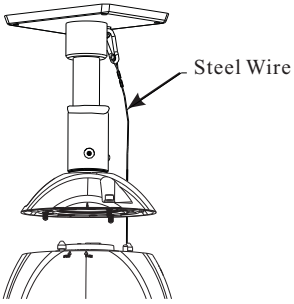

(Fig 7)

③ Reassemble the base tray with the body.

a----move the camera upwards and make the guide pins match with the guide holes.
b----turn the camera clockwise to fasten.

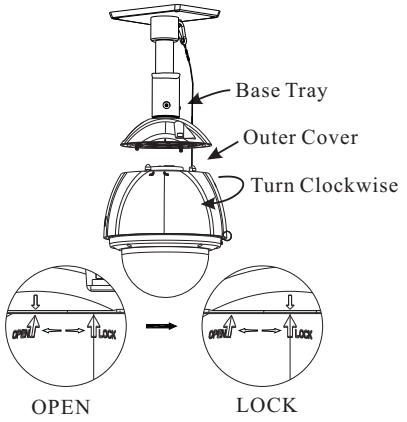

(Fig 8)

c----Fasten three screws.

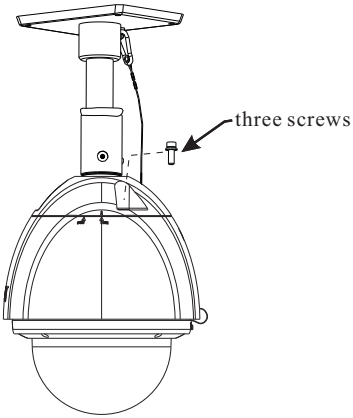

(Fig 9)

Step 5

① Loosen four screws under the bottom cover.

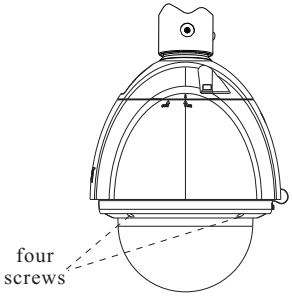

(Fig 10)

② Remove the protective material and lens cap as below picture (fig 11).

③ Reassemble the transparent cover with the body according to figure 10 and then fasten the screws.

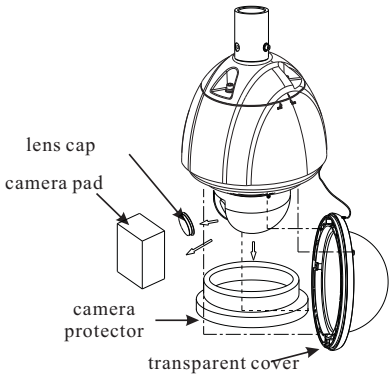

(Fig 11)

2.3 Connection

Connection End(AC 24V)

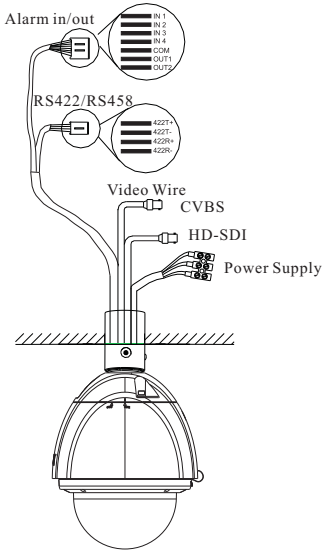

Power Connection(AC 24V)

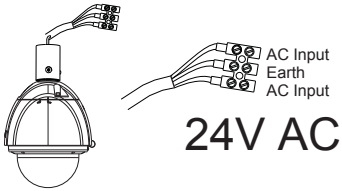

Power Connection(DC 12V)

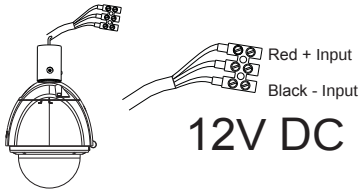

Alarm Connection

1. Alarm Input

a) There are four independent alarm input ports (ALM-IN1~ALM-IN4) and one common port (ALM-COM).

b) Alarm input: connect DC5V~DC12V voltage between the alarm input port ALM-Inx (x=1~4) and the common port (ALM-COM).

c) Disconnect the voltage between alarm input port(ALM-Inx(x=1~4) and common port (ALM-COM) to cancel the alarm.

2. Alarm Output

a) Support 1CH alarm output including OUT1,OUT2 connections; support two input modes namely NO, NC.

b) Alarm output: support only one passive switch for user to connect alarm devices; the alarm output state will be auto on/off according to your setting.

c) Please refer to below chart for the dome output state.

Output Mode	Whether to output	Connection between OUT 1 and OUT 2
NO Output	No	Open Circuit
	Yes	Short Circuit
NC Output	No	Short Circuit
	Yes	Open Circuit

3. Examples

Input connection	Output Mode	Output Connection
ALM-IN DC5V–DC12V ALM-COM No Alarm Input	NO	OUT 1 OUT 2
	NC	OUT 1 OUT 2
ALM-IN DC5V–DC12V ALM-COM Alarm Input	NO	OUT 1 OUT 2
	NC	OUT 1 OUT 2

2.4 RS422/485 Connection

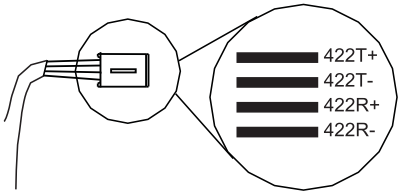

RS422 / RS485 connection:
The difference between RS422 and RS485 is :
1. RS485 has two cable , and each cable can send & receive.
2. RS422 has four cable (2 for sending, 2 for receiving)

RS485 to RS422 connection:
PTZ RS422 R+ connect DVR (RS485+) A port (ta port of TruVue KB)PTZ
PTZ RS422 R- connect DVR (RS485-) B port (tb port of TruVue KB)

PTZ only receives signal from DVR or Keyboard when using RS485.

3.1 Startup and Shutdown

Before running your camera, please make sure all the connections are done correctly.

Startup: After the power supply is connected, the camera will automatically started up and then the system of the speed dome will perform a self-check. The PTZ cannot be operated until it has successful completed self-check.

Shutdown: Disconnect the power cable.

3.2 Keyboard Setup

The address, communication protocol and baud rate of the keyboard should be consistent with that of dome camera. Since different keyboards have different ways to set protocol, please refer to relevant user manual of keyboard for details.

Panning and tilting: use the joystick of the controller
Controlling zoom: move the joystick clockwise (Tele) or counterclockwise (Wide)
OSD commands:
Joystick Up----move to the above menu
Joystick Down---- move to the below menu
Joystick Right----select the sub-menu/exit
Joystick Left----return to the previous menu and save the setting

NOTICE: Please refer to the user manual of keyboard for operation decription.

Call 95 preset to enter the main menu interface:

MAIN MENU
1 SYSTEM INFORMATION ↓
2 SYSTEM SETUP ↓
3 CAMERA SETUP ↓
4 PRESET SETUP ↓
5 DOME FUNCTION ↓
6 DISPLAY SETUP ↓
7 LOAD DEFAULT ↓
0 EXIT

NOTE：The arrow "↓" icon means there is submenu to operate.

Chapter 4 Menu Setup

4.1 System Information

You can check the version, camera, manufacture, temperature, date, dome ID, protocol, baud rate, etc. of the speed dome camera in system information interface.

4.2 System Setup

Enter Main Menu→System Setup as below:

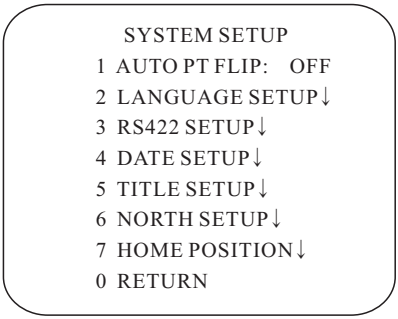

4.2.1 Auto PT Flip

This function is useful to monitor moving objects or people passing directly under the camera.

① Enable "AUTO PT FLIP" and then exit menu.

② Keep on moving downwards so that the PTZ can follow the object from one side to another side, ensuring an object or a person passing directly under the dome is always monitored.

4.2.2 Language

Our product supports two languages: Chinese and English.

4.2.3 RS422 Setup

Enter Main Menu→System Setup→RS422 Setup as below:

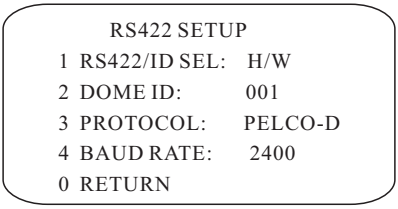

RS422 Selection: H/W (hardware) and F/W (software) are selectable. It is effective to set the communications when selecting F/W. Otherwise the dome communication is in accordance with dial switches.
Dome ID: Range from 001 to 255.
Protocol: Support PELCO-D and PELCO-P.
Baud Rate: The baud rate is selectable from 1200bps to 9600bps.

NOTICE: The change to communication setup will take effect after rebooting. The communication of keyboard should be modified correspondingly.

4.2.4 Date Setup

Enter Main Menu→System Setup→Time Setup interface as below:

① Move the joystick of the controller in all four directions to select the desired parameters.
② Call 1 to save the setting.

4.2.5 Title Setup

The steps to set dome title are same with that of time setup. Please refer to section 4.2.4 for details.

4.2.6 North Setup

Enter Main Menu→System Setup→North Setup interface as below:

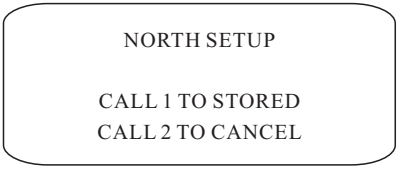

① Move the joystick in all four directions to choose a location. Call 1 preset to save the configuration.

② The horizontal angle will treat the north position as a reference; otherwise it will treat the horizontal origin as a reference to display the clockwise rotation angle of camera.

③ The vertical PTZ will treat its highest point as a reference (when the camera is parallel with the horizontal ground) to show the included angel between the camera and horizontal ground.

4.2.7 Home Position

Enter Main Menu→System Setup→Home Position interface as below:

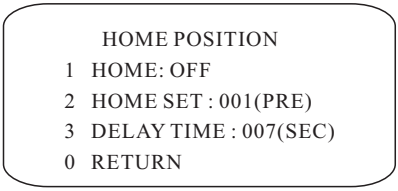

①Move the joystick upwards or downwards to enable the home position function.

②Then select preset which has been set in advance. Please refer to section 4.4 for details to set preset.

③Select delay time and exit the menu. When the stand-by time of the dome camera exceeds the delay time, the camera will automatically execute the command to monitor the selected preset.

NOTE: Delay time range from 005s to180s

4.3 Camera Setup

Entering Main Menu→Camera Setup brings the following screen.

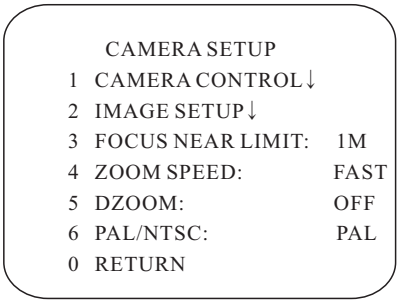

4.3.1 Camera Control

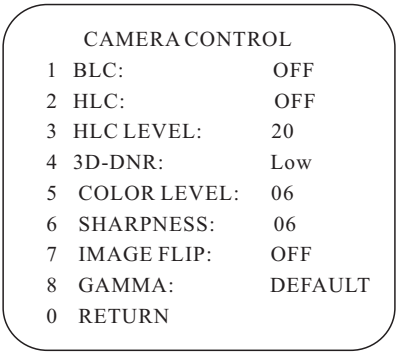

BLC: Improve the brightness of the foreground when back light is so stronger that the foreground is dark.

HLC: Effectively control the phenomenon of large halation and vague images caused by the high light sources from the camera lens. Meanwhile, this function can also compensate the highlight area to get more clear images.

HLC Level: Select high light control level.

3D-DNR: Reduce the noise of the brightness and chroma of the image in low illumination condition.

Color Level: Adjust the screen level.

Sharpness: Set the image definition.
Image Flip: Flip the image.
Gamma: Measurement the contrast of an image.

4.3.2 Image Setup

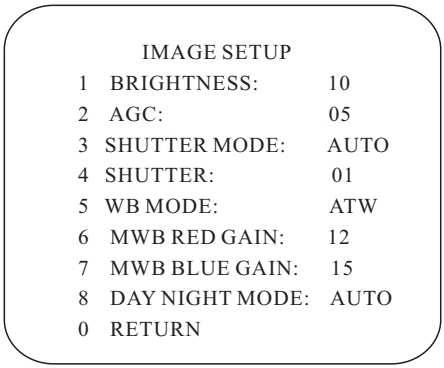

Brightness: Range from 00 (darkest) to 20 (brightest). Adjust the screen brightness.
AGC: Select the level of automatic gain.
Shutter Mode: You can choose auto or manual mode.
Shutter: The lower the value of shutter is, the brighter the image is.
WB Mode: The auto, manual and ATW mode are available. The whitebalance menu adjusts the balance of the screen colors under different lighting conditions.
MWB Red Gain: operates when white balance is on the manual mode.
MWB Blue Gain: operates when white balance is on the manual mode.
Day Night Mode: Support day, night and auto mode.
--auto: operate in day most time. And switch to night mode if l light level is detected during nighttime.
--day: operate in day mode at all time.
--night: operate in night mode at all time.

4.3.3 Focus Near Limit

Set the nearest distance of focus.

4.3.4 Zoom Speed

Adjust zoom speed.

4.3.5 DZoom

To turn on/ off the D-zoom mode. After enabling digital zoom mode, digital zoom will be increased on the basis of optical zoom.

4.3.6 Video Format

To choose video format: PAL/NTSC.

4.4 Preset Setup

This function is used to memorize the specific position of pan, tilt, zoom and focus, giving much convenience for quick return to this position by calling preset.

① Return to the live and move the joystick to select a location. Then call 95 preset to enter the main menu interface. Selecting the preset setting menu brings up a screen as shown below:

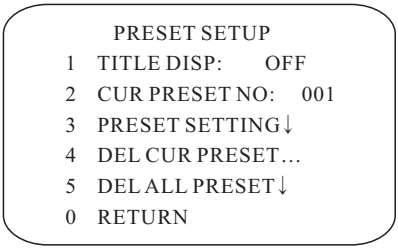

② Select the current preset number.

③ Enter Preset Setting interface as below:

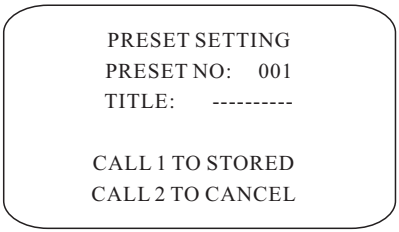

④ Move the joystick in all four directions to select the numbers or letters for setting the title. The title will display on the screen when passing though the preset if the title display has been enabled

NOTE: There is another way to set preset: Number+Preset(please refer to the user manual of the keyboard you are using. This shortcut does not support title setup.

4.5 Dome Function

Dome function includes seven sub-menus: Patrol Setup, Task Setup, Alarm Setup, Trace Setup, Day Night, New Password and Change Password.

4.5.1 Patrol Setup

Enter Main Menu→Dome Function→Patrol Setup as below:

```
PATROL SETUP
1  PATROL NO:    1
2  EDIT CUR PATROL ↓
3  RUN CUR PATROL…
4  DEL CUR PATROL ↓
0  RETURN
```

In this interface, by programing presets in patrol list in advance, the system will keep calling those presets at the set time in sequence when executing patrol command so that non-stop monitoring between multiple important positions can be achieved.

Steps are following:

① Enter the "Edit Current Patrol" interface as below. This camera supports 8 patrols with 16 presets each set.

② Move the joystick upward or downward to control the cursor; move the joystick right or left to change the parameter. The preset ranges from 001~255 and the dwell time ranges from 05~240s.

③ When setting the patrol, pressing "IRIS OPEN" will increase the value by 10. pressing "IRIS CLOSE" will decrease the value by 10. Call 1 to save the setting.

FORMAT: PRE NO. /TIME (SEC)
01: 001/007 02: 002 /005
03: 000/005 04: 000/005
05: 000/005 06: 000/005
07: 000/005 08: 000/005
09: 000/005 10: 000/005
11: 000/005 12: 000/005
13: 000/005 14: 000/005
15: 015/005 16: 000/005
CALL 1 TO STORED
CALL 2 TO CANCEL

④ In the patrol setup interface, select "Run The Current Patrol" item to execute the command. The camera will automatically keep running according to the patrol you set until new command is received. The corresonding operating information will display on the screen when the camera is running.

4.5.2 Task Setup

Enter Main Menu→Dome Function→Task Setup as below:

TASK SETUP
1 TASK: OFF
2 TASK SETTING ↓
3 DEL CUR PATROL ↓
0 RETURN

By dividing 24 hours into several periods and appointing different commands for each period, the camera system will automatically execute the commands according to the set time if there is no operation.

① Enable the task function;

② Enter the task setting interface as below. Move the joystick in all four directions to change the parameters.

Time Format: Start Time--End Time. The tasks will be automatically arranged in order depending on the start time so that each task will be executed one by one.

Task Type: RSC, ASC, PRE, PAT, TRA.

.

```
TASK SETTING
1 08:00 – 11:59  : PRE : 99
2 12:00 – 13:59  : PAT : 01
3 00:00 – 00:00  : NON: 01
4 00:00 – 00:00  : NON: 01
5 00:00 – 00:00  : NON: 01
6 00:00 – 00:00  : NON: 01
7 00:00 – 00:00  : NON: 01
8 00:00 – 00:00  : NON: 01
CALL 1 TO STORED
CALL 2 TO CANCEL
```

NOTE: The home position function will be disabled if enabling task setting.

4.5.3 Alarm Setup

Enter main menu→dome function→alarm setup as below:

```
ALARM SETUP
1  IN1 ALARM:    OFF
2  IN1 CALL:     001
3  IN2 ALARM:    OFF
4  IN2 CALL:     002
5  IN3 ALARM:    OFF
6  IN3 CALL:     003
7  NEXT SETUP ↓
0  RETURN
```

① Enable “IN1 alarm”. Then the first channel is allowed to input alarm, otherwise it is prohibited to input alarm.

② Select preset under “IN1 Call”. When the first channel alarm is triggered, the camera will automatically monitor the selected preset . The steps to set IN2 Alarm , IN3 Alarm and IN4 Alarm are same with that of IN1 Alarm.

③ Enter the next screen setup. Select alam output type(OFF/NC/NO).

```
ALARM SETUP
1  IN4 ALARM:      OFF
2  IN4 CALL:       004
3  ALARM OUTPUT:   NC
4  OUT CONDITION:  ANY
0  RETURN
```

④ Select “Out Condition”. When the alarm output channel raises the alarm, the alarm information of the corresponding channel will display on the screen.

⑤ Alarm priority: the channel No. is higher, the priority level is lower. For example: IN1 Alarm is higher than IN2 Alarm, so on and so forth. If high priority channel and low priority channel trigger alarm simultaneously, the preset of the latter will not be called, but if you have set the alarm output for the latter, its alarm information will be displayed. For example: when IN1 alarm and IN2 alarm channel which has enabled “Out Condition” almost trigger alarm at the same time, the alarm information of IN2 alarm channel is allowed to output but the preset of it will not be called.

NOTICE: if the dome is on the menu state when alarm is triggering , any command is negative.

4.5.4 Trace Setup

Enter Main Menu→Dome Function→Track Setup interface as below:

```
TRACE SETUP
1  TRACE NO:   1
2  TRACE SETTING ↓
3  TRACE RUN…
4  DELETE TRACE ↓

0  RETURN
```

This function is used to memorize the operation to PTZ, zoom, focus so that repeating operation process can be realized by running trace.

① Choose the current trace number;

② Enter the trace setting. Press “IRIS-“ and move the joystick in all four directions to control the dome camera. Then call No. 1 preset to save the setting.

Notice: Each trace can memorize up to 180s. If the time exceeds 180s, the system will automatically save the operation data and return to the previous menu. In addition, up to 360 commands can be memorized for each trace. If exceeding 360 commands, the system will automatically save the first 360 commands and then exit the current interface. The recording time is related to the operating frequency. The more frequent the operation is , the shorter the memory time is .

③ Select "Trace Run…" item to perform the command.

4.5.5 Day & Night

Enter the Main Menu→Dome Function→Day Night interface as below:

① Move cursor by controlling joystick left and right; change the parameter by moving the joystick upward and downward.

② Enable "Day& Night" and respectively set the B/W time and color time.

③ Call 1 preset to save the setting. Then the camera will automatically switch from B/W to color at the set time.

Notice: Day/Night mode in image setup(section 4.2.3) is disabled if enabling this function.

4.5.6 New Password and Change Password

New Password:

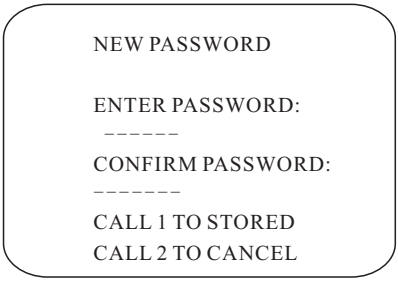

Set password by preset: Preset+N+Enter(please refer to the instruction of the keyboard for details)

Numbers from 1 to 9 are available. The password should be 6 characters.

Empty password is invalid when creating new password.

Password need to be input when you log in next time.

Change Password

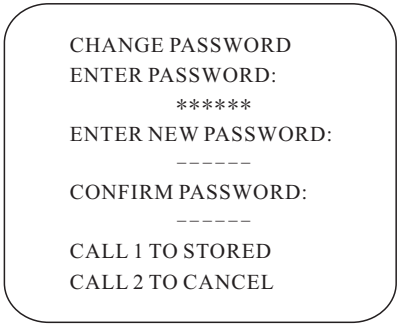

Input the current password and then input the new password twice (entering empty new password means to delete the current password).

4.6 Display Setup

You can enable title display, time display, temperature display, camera OSD display, orientation display or system display if you need.

4.7 Load Default

Master Reset: Restore the camera state and active menu to factory default but do not clear those parameters such as dome title, dome ID, protocol, baud rate, preset, patrol and so on.

Master Clear: Restore the camera to factory default.

System Reboot: Reboot the camera.

Firmware Update: It is used for updating the dome camera system by RS422 BUS. Firmware update will delete the dome system software, which will result in failure to work . Please be cautious! If you want to update the camera's system, please make contact with us to obtain a new software package firstly!

PS: Preset Description

Call Preset	Call NO.90 Preset	Run trace 1
	Call NO.91 Preset	Run patrol 1
	Call NO.92 Preset	Run patrol 2
	Call NO.93 Preset	Run patrol 3
	Call NO.94 Preset	Run patrol 4
	Call NO.95 Preset	OSD menu
	Call NO.97 Preset	Enable random scan
	Call NO.99 Preset	Enable P-P SCAN
Set Preset	Set NO. 91 preset	Set random scan, TASK auto call the beginning point
	Set NO. 92 preset	Set left border of P - P SCAN
	Set NO. 93 preset	Set right border of P - P SCAN

Appendix A Troubleshooting

Problem	Cause and Solution
No image and no action when power is input	Check if the power cable is normal or misconnected
The image is not stable	Check if the video cable is properly connected
	Check if the power supply is enough
The image is vague	Check if the dome cover or the lens is stained with dirt
The image has a lot of noise	Check if there is strong interference source surrounding the dome
Normal Self-check but no image	Remove the protective cover of the camera lens
	Check if the video cable is properly connected
Normal Self-check but out of control	Check if the RS422 bus is properly connected
	Check if the Dome ID, communication protocol setup is right
Abnormal self-check Not stable control	Check if the protective foam is removed
	Check if the power meets the requirement.
The alarm output or preset is not working	Check if the alarm device is working
	Check if the alarm in/out cable is connected
	Check if alarm input is enabled

Appendix B Specification

Camera	Image Sensor	1/3 Inch Progressive CMOS
	Effective Pixel	1920(H) x 1080 (V) 2 Mega Pixel
	Horizontal Resolution	1000 TVL
	Min. Illumination	0.5 Lux(Day), 0.1Lux(Night), 0.05Lux (DSS ON)
	Lens	20 x Zoom, f = 4.7-94mm, F1.6 ~ F3.5
	SNR	> 50dB
	Focus Mode	Auto/Manual
	Day/Night	Auto/Manual/Timing
	BW	Auto, indoor, outdoor, ATW, manual
System	Alarm Input	4CH
	Alarm Output	1CH
	Auto Flip	YES
	Preset	255
	Patrol	8
	Trace	4
	Scan	2
	Area	8
	Home Position	Yes
	Task	Yes
PTZ	Pan Range	360°endless rotation
	Pan Speed	Preset: 400°/s , Manual Control Speed: 0.5~120°/s
	Tilt Range	0~90° (auto-rotation)
	Tilt Speed	Preset: 400°/s , Manual Control Speed: 0.5~90°/s
General	OSD	English
	Input Voltage	AC24V/2A , DC12V/3A(option)
	Video Output	HD-SDI: 1.0Vp-p, 75Ω, PAL/NTSC
		CVBS: 1.0Vp-p, 75Ω, PAL/NTSC
	Control Method	RS422/RS485
	Power Consumption	9W / Max 24W (heater on)
	Working Environment	- 20°C~60°C / Less than 95%(RH)
	Protection Level	IP66
	Weight	3.5KG

DISTRIBUTED BY

ASSA ABLOY

Always better

Security Merchants Australia Pty Ltd,
an ASSA ABLOY Group Company

www.security-merchants.com • 1300 663 904

450013000067 A0